



Flexible, Dependable & Affordable

One World Powertrain

1. Engine
2. Manual Transmission
3. Axle Assembly Components
4. Automatic Transmission

One World Powertrain Plus


5. Electrical
6. Brake Components
7. Steering Components
8. Air Conditioning/Heating

One World Deluxe

9. Additional Electrical
10. Suspension Components
11. Computers & Electronics
12. Fuel System
13. Cooling System
14. Additional Components

One World Ultimate

Covers Items 1–14 and most other mechanical breakdown components, except for coverage listed as excluded on your Vehicle Service Contract (VSC).

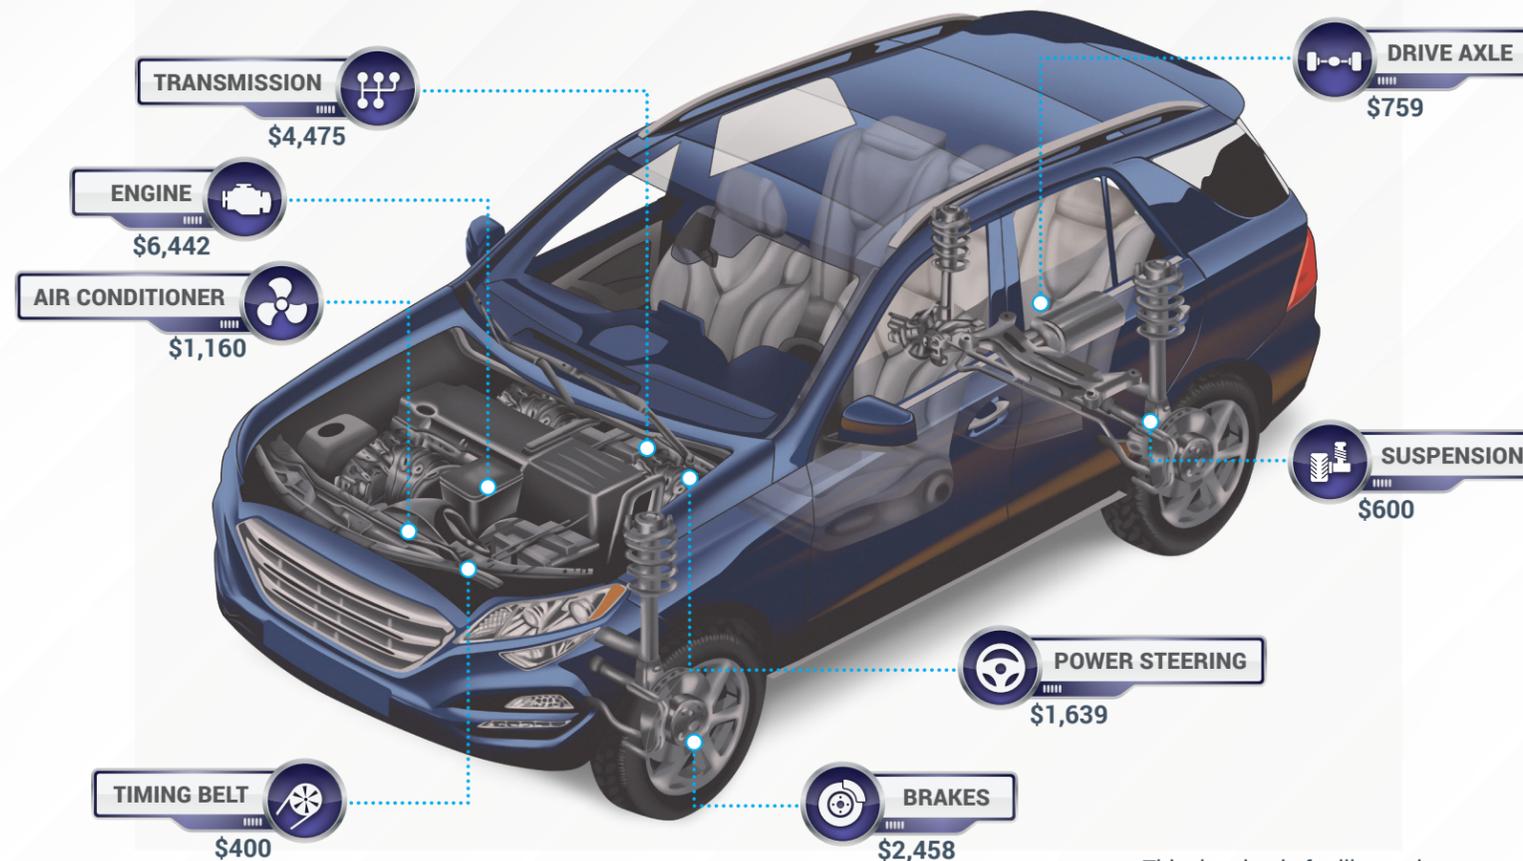

This drawing is for illustration purposes only.

Benefits



24/7 ROADSIDE ASSISTANCE²

Includes towing, jumpstarts, fuel/fluid delivery, lockout assistance and flat tire changes. Available 24 hours, 7 days a week, 365 days a year. Up to \$150 for towing and \$50 for all other covered services per incident.



SUBSTITUTE TRANSPORTATION³

Covers the costs on substitute transportation up to \$40 per day/\$280 per repair, on any covered repair!



DISLOCATION BENEFIT³

Stranded away from home? Reimburse up to \$150 per day/maximum of 3 days for interruption during your trip when stranded more than 150 miles from home. \$450 maximum benefit during entire contract term.

2. Parts and fuel/fluids are your additional cost.

3. See Vehicle Service Contract for details on applicability, limitations and reimbursement limits.

One World Surcharged Coverages

COMMERCIAL USE (MANDATORY IF APPLICABLE): Includes vehicles used for farming or ranching, job activities, ride-share services, and delivery of goods or food.

LIFT KIT (MANDATORY IF APPLICABLE): Provides coverage for oversized/undersized tires, body lifts and suspension lifts that are installed by the dealer or dealer authorized facility at the time of vehicle sale.

ENHANCED ELECTRICAL (OPTIONAL): Included in Deluxe and Ultimate Coverages

TECHNOLOGY PACKAGE (OPTIONAL): Included in Ultimate Coverage. Provides coverage for specified advanced technology items such as GPS/navigation system, factory installed TV/VCR/DVD players.

HYBRID ELECTRICAL VEHICLE COVERAGE (OPTIONAL): Included with Ultimate Coverage. Provides coverage for components specific to Hybrid Electric Vehicles as listed in the Vehicle Service Contract.

EMISSIONS COVERAGE (OPTIONAL): Included with Ultimate Coverage. Provides coverage for vapor and emission canisters; positive crankcase ventilation valve; distributor cap and rotor; and exhaust systems.

SAFETY RESTRAINT SYSTEM (OPTIONAL): Included with Ultimate Coverage. Provides coverage for specified components such as airbags, impact sensors, clock springs, safety belts.

Parts listed under Surcharged Coverages may not be inclusive, see Vehicle Service Contract for details.

Certain restrictions apply for Commercial Use and Lift Kit Coverages. See Vehicle Service Contract for complete details.

MULTIPLE DEDUCTIBLE CHOICES AVAILABLE

Optional End of Term Replacement Coverage

You may be eligible to purchase replacement coverage to cover Your Vehicle upon expiration of the Vehicle Service Contract. The request for replacement must be made at least 30 days and/or 1,000 miles prior to the expiration of the Vehicle Service Contract in order to qualify for a replacement contract.



COVERAGE YOU CAN COUNT ON

GOOD AT ANY ASE CERTIFIED REPAIR FACILITY

First Guard Vehicle Service Contracts are honored at all import and domestic dealerships nationwide, as well as any other certified repair shops.

CLAIMS PAID BY CREDIT CARD

When a repair is needed, First Guard pays the repair facility by credit card over the phone.

COVERS 100% PARTS AND LABOR

First Guard covers 100% of retail parts and labor for covered repairs, as well as all seals & gaskets of covered components.

TOTAL CONTROL OF YOUR INVESTMENT

You decide who works on your vehicle.

CANCEL AT ANYTIME

Can be canceled for a refund of a portion of the coverage up to 100% if canceled in the first 30 days without claims.

FULLY TRANSFERABLE

Coverage can be transferred to another owner if you decide to sell the vehicle at a later date.

100% FULLY INSURED

First Guard is 100% fully insured and backed by a property and casualty insurance company with a A- Excellent rating from A.M. Best.

OneWorld Ultimate Coverage



Includes all Deluxe, Powertrain Plus & Powertrain coverages

Our highest level of coverage option. This exclusionary coverage plan offers the most comprehensive coverage for your new or used vehicle. Covers most mechanical breakdown components, except those listed as excluded in the Vehicle Service Contract (VSC).¹

OneWorld Deluxe Coverage

Includes all components listed below - in addition to Powertrain Plus and Powertrain coverages

ELECTRICAL: Starter solenoid, automatic-off headlamp system, power seat motors, cruise control, manually operated switches, electronic combination entry system (does not include transmitters and receivers for remote locks), power door locks, retractable headlamp motor, windshield washer pump, distributor, ignition coil, starter motor, power mirror defogger, headlamp washer, engine cooling fan motor, power mirror motor, circuit open relay, defogger relay, power antenna motor/mast assembly, antenna cord, compact disc player, graphic equalizer, radio tuner, stereo component amplifier, tape player, GPS/navigation system (does not include programming or updates), electric fuel pump assembly, sunroof motor, lamp failure indicator sensor, electronic instrument cluster, power window motor/regulator, wiper motor, clutch starter interlock system, body control module, convertible top motor, alternator, cruise control vacuum motor, automatic shoulder belt motor and switches, automatic temperature control module, anti-lock braking/traction control computer and sensors, voltage regulator, starter drive; engine compartment wiring harness, computerized timing control unit; electronic ignition module, crank angle sensor; knock sensor; manual heater/a.c. control head, horns; trailer brake wiring harness, auxiliary power supply wiring; exterior cab lighting, O-2 sensors transducer, servo and amplifier; powertrain control module, power mirror electronic control unit; electronically controlled transmission/transfer case electronically modulated suspension computer, engine control computer progressive power steering computer; steering sensor, tilt/telescoping steering computer; trip computer, traction control computer; variable induction system, vehicle security computers and sensor.

FUEL SYSTEM: Fuel pressure regulator, fuel injectors, air flow meter, carburetor, fuel tank, throttle body, diesel fuel injection pump, fuel sensors, fuel pump, electronic fuel injection system, vacuum pump, fuel tank sending unit; metal fuel delivery lines, and fuel tank switching unit/switch.

SUSPENSION: (Front and Rear) - Upper and lower control arms, steering knuckle, bearings and bushings, electronic modulated suspension actuator, control arm shafts, spindle support, lower ball joints, tie rod assemblies, radius arm, spindle, upper ball joints, torsion bars, stabilizer bar, links and bushings, struts, strut bearing plates; spindle and spindle support, wheel bearings; panhard bar, track bar; suspension bumpers, leaf springs; leaf spring shackles and hardware, load assist shocks; shocks, load assist springs; and coil springs. Variable Dampening Suspension: compressor, control module; dampening actuator, solenoid; struts, height sensor; and mode selector switch.

COMPUTER AND ELECTRONICS: Variable induction system, electronic ignition module, cruise control computer, cruise control module, tilt/telescoping steering computer, electronically modulated suspension computer, engine control computer, power control module, sunroof control computer, electronic instrument display computer, vehicles security computers and sensors, Power mirror electronic control unit, automatic shoulder belt computer, trip computer, progressive power steering computer, steering sensor, skid control/traction control computer, intrusion monitoring system, power seat computer, electronic fuel injection (EFI) computer, anti-lock braking system (ABS) computer and sensors and electronically controlled transmission/transfer case computer and sensors.

COOLING SYSTEM: Engine fan shroud, engine fan clutch, engine fan motor, seals and gaskets, engine fan, radiator, fan bracket subassembly, belt tensioner, radiator; heater core; thermostat; blower motor; hot water valve; engine oil cooler; cooler lines and fittings.

ADDITIONAL COMPONENTS: Accelerator pedal and/or bracket subassembly; accelerator pedal rod assembly; back door lock assembly; convertible roof hook; door handles; door lock cylinder; front and rear door lock assembly; front seat belt; glove compartment door lock cylinder; glove compartment door latch subassembly; hinges; hood lock assembly; hood lock control cable assembly; hood support assembly; rear seat belt; reclining seat back adjuster; removable roof lock handle; seat track assembly; shoulder belt guide rail assembly; sliding roof drive cable; sliding roof guide rail; tail gate lock assembly; tilt roof lock handle assembly.

EXAMPLES OF WHAT IS NOT COVERED

Applies to all coverage levels

- Maintenance services including but not limited to: alignments, adjustments, tune-ups, brake pads.
- Damage or breakdown resulting from collision.
- Breakdowns covered by an insurance policy or manufacturer's major component or full coverage warranties.
- Breakdowns when the manufacturer has announced it's responsibility through recall.
- For coverage types other than Ultimate, any part that is not specifically listed in the Schedule of Coverages.

This is not a Vehicle Service Contract. The content of this brochure is limited by its size. The entire terms and exclusions of the agreement are included in the Vehicle Service Contract.

1. See VSC for detailed coverage information.

OneWorld Powertrain Plus Coverage

Includes all components listed below - in addition to Powertrain coverages

ELECTRICAL: Starter solenoid, manually operated switches, starter motor, wiper motor, power window motor/regulator alternator, voltage regulator; starter drive, engine compartment wiring harness; computerized timing control unit, electronic ignition module; crank angle sensor, knock sensor; ignition switch, ignition switch lock cylinder; washer pump and switch, stop lamp switch; headlamp switch, turn signal switch; heater/A/C blower speed switch, manual heater/A/C control head; horns, trailer brake wiring harness; auxiliary power supply wiring, exterior cab lighting; auxiliary fuel tank switching unit and switch, and O-2 sensors.

BRAKE COMPONENTS: Master cylinder, seals and gaskets disc brake calipers, brake line and tubes, load-sensing proportioning valve, brake booster, wheel cylinders, parking brake cable and proportioning valve. The following ABS parts are covered: electronic control processor, wheel speed sensors; hydraulic pump/motor assembly, pressure modulator valve/ isolation dump valve; and accumulator. The following parts are also covered: power brake cylinder, compensating valve; hydraulic control unit, hydraulic trailer brake assembly and its components.

STEERING COMPONENTS: Idler arm, pitman arm, steering dampener, steering column coupling, steering column shaft, relay rod, tie rod, power steering pump, steering column assembly and all internal parts contained within the steering box, rack and pinion gear, power steering hoses; steering knuckles, steering box and rack and pinion gear housings; power steering assist cylinder, power steering pump cooler; twin "I" beam & bushings, and steering travel stop. Rear Wheel Steering: Rear steering shaft and couplings; power cylinder and pump, electronic control unit/solenoid; phase control unit, stepper motor; steering box, control valve; rack, and tie rod ends.

AIR CONDITIONING/HEATING: Heat pump, condenser, compressor clutch assembly, evaporator, compressor and bearings. blower motor, pressure regulator assembly, heater control valve, receiver/dryer, A/C pressure switches, expansion valve and condenser fan and motor seals and gaskets, Air conditioning lines and hoses, idler pulley and idler pulley bearing; high/low compressor cut-off switch, expansion valve; and pressure cycling switch. The following parts are also covered if they are required in connection with the repair of a covered part listed above and only if they have failed: accumulator/receiver dryer, orifice tube; oil and refrigerant.

OneWorld Powertrain Coverage

ENGINE: All internally lubricated components and: timing belt, timing gears, exhaust manifolds, turbo assembly, oil pan, seals and gaskets, piston, timing cover, engine mounts, intake manifold, turbo waste gate, flywheel, cylinder heads, factory installed supercharger, intercooler, timing chain, flex plate, turbo intercooler, crankshaft pulley, oil pump, supercharger assembly, valve covers, crankshaft, equipment drive shaft, engine oil reservoir, camshaft, engine oil reservoir pump, balance shaft and belt, engine block (but only if damaged as a direct result of a mechanical failure of a covered component), and rotary engine components including: rotor, bearings, apex seal and eccentric shaft, rotary housing piston rings, connecting rod bearings, crankshaft main bearings, camshaft bearings, cam followers, guides, tensioners, rocker arms, rocker shafts, rocker bushings, cylinder head valves, valve guides, valve lifters, valve springs, valve seals, valve retainers, valve seats, push rods, water pump, oil pump housing, harmonic balancer, timing chain cover, intake and exhaust manifolds, cam gear bolt, harmonic balancer bolt, and head bolts.

MANUAL TRANSMISSION: Transfer case components: all internally lubricated components and: transmission mounts, seals and gaskets, clutch master cylinder, clutch release cylinder, shift linkage, gears and shaft, hydraulic clutch lines and case (but only if damaged as a direct result of a mechanical failure of a covered component).

AXLE ASSEMBLY: (Front, Rear, Four-wheel and All-wheel drive) - All internally lubricated components and: propeller shaft, axles and bearings, constant velocity joints and boots, center support bearing, universal joints, seals and gaskets, locking hubs, viscous coupling, thrust washers, four-wheel drive actuator, differential cover, and drive axle housing (but only if damaged as a direct result of a mechanical failure of a covered component).

AUTOMATIC TRANSMISSION: (Transfer Case Components) - All internally lubricated components and: torque converter, shift linkage, vacuum modulator, seals and gaskets, solenoids, transmission mounts, flywheel/flex plate electronic shift control unit, transmission cooler, oil pan, slave/clutch master cylinder, pilot bearing, throw-out bearing, and case (but only if damaged as a direct result of a mechanical failure of a covered component).